FAXPHONE B70

PARTS CATALOG

Canon

Canon

FIGURE 100 ASSEMBLY LOCATION DIAGRAM

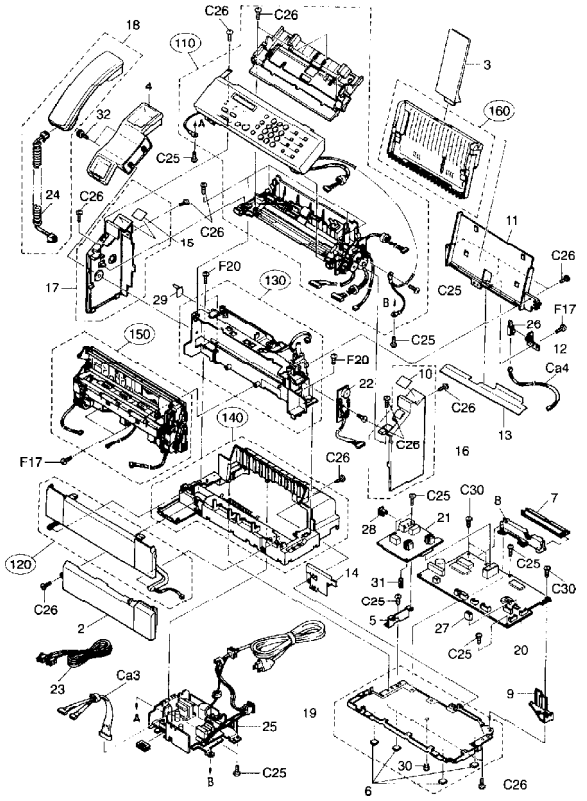

FIGURE 110 ADF UNIT

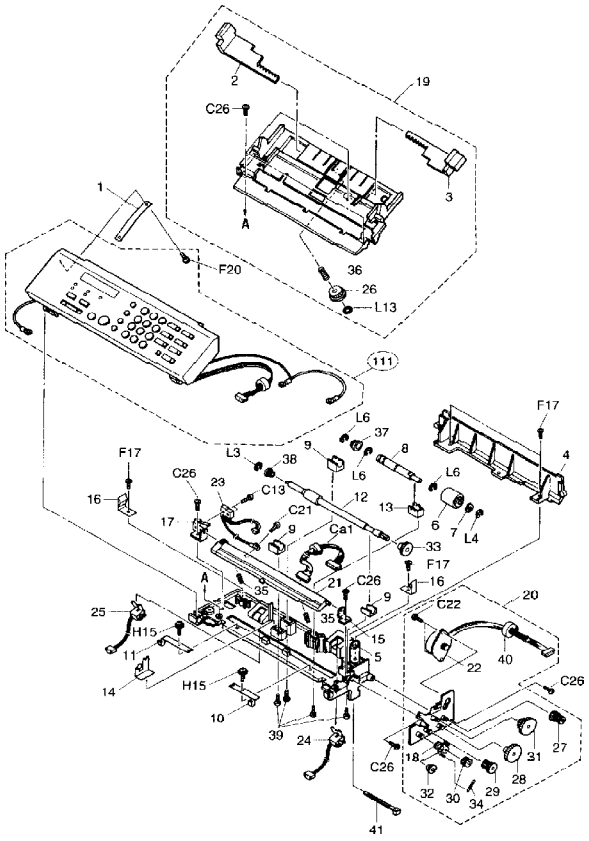

NUM.	PART #	DESCRIPTION
100-1	HA1-2657-000	ADDRESS LABEL
2	HA2-2001-000	FRONT COVER
3	HA2-2003-000	TRAY, PAPER SUPPORT
4	HA2-2008-000	HOLDER, HANDSET
5	HA2-2009-000	BRACKET, NCU CARD
6	HA2-2015-000	FOOT, RUBBER (4)
7	HA2-2097-000	COVER, REAR PANEL
8	HA2-2098-000	PANEL, REAR
9	HA2-2099-000	COVER, POWER CORD
10	HA2-2102-000	LABEL, RECORDING PAPER SET
11	HA2-2106-000	FRAME, RECORDING PAPER HOLDER
12	HA2-2117-000	BRACKET, APS
13	HA2-2118-000	SHEET
14	HA2-2172-000	EARTH PLATE, POWER SUPPLY
15	HA2-2184-000	LABEL, DOCUMENT SET
16	HF1-1130-000	COVER, SIDE (R)
17	HF1-1145-000	COVER, SIDE (L)
18	HG1-2184-000	HANDSET UNIT
19	HG1-3727-000	COVER, BASE
20	HG1-3731-000	SCNT CARD UNIT
21	HG1-3732-000	NCU CARD UNIT
22	HG1-3733-000	INTCNT CARD UNIT
23	HH2-1266-000	MODULAR CORD, 6P (B)
24	HH2-1335-000	CURL CORD (B)
25	HH3-5238-000	POWER SUPPLY UNIT
26	WC4-5052-000	MICRO SWITCH
27	WS1-0172-000	PLUG, SHORT
28	WS9-5038-000	SPACER, MODULAR
29	WT2-0145-000	CLAMP, CORD
30	WT2-0496-000	SPACER, CORD
31	WT2-5039-000	SPACER, CORD
32	XA9-0603-000	SCREW, HANDSET HOLDER (2)
110-1	HA2-2027-000	BELT, STOPPER
2	HA2-2047-000	DOCUMENT GUIDE (L)
3	HA2-2048-000	DOCUMENT GUIDE (R)
4	HA2-2051-000	CHASSIS, ADF
5	HA2-2052-000	BASE, ADF

NUM.	PART #	DESCRIPTION
110-6	HA2-2053-000	SEPARATION ROLLER
7	HA2-2054-000	WASHER, STOPPER
8	HA2-2055-000	SHAFT, SEPARATION ROLLER
9	HA2-2056-000	HOLDER, SHAFT (3)
10	HA2-2057-000	LEAF SPRING, LOCK (R)
11	HA2-2058-000	LEAF SPRING, LOCK (L)
12	HA2-2059-000	ROLLER, PAPER FEED
13	HA2-2060-000	HOLDER, SHAFT
14	HA2-2063-000	EARTH PLATE, SHAFT
15	HA2-2077-000	SUPPORTER, CS (R)
16	HF1-0913-000	LOCK, OPERATION PANEL UNIT (2)
17	HF1-1115-000	SUPPORTER, CS (L)
18	HF1-1118-000	BRACKET, GEAR
19	HG1-3722-000	DOCUMENT GUIDE UNIT (LOWER)
20	HG1-3724-000	GEAR UNIT, DOCUMENT FEED
21	HG1-3725-000	CS UNIT
22	HH7-1931-000	MOTOR
23	HH7-1935-000	SWITCH, OPERATION PANEL
24	HH7-1939-000	DS UNIT
25	HH7-1940-000	DES UNIT
26	HS1-0342-000	GEAR, 18T
27	HS1-0343-000	GEAR, 25T/17T
28	HS1-0344-000	GEAR, 55T
29	HS1-0345-000	GEAR, 42T/17T
30	HS1-0346-000	GEAR, 19T
31	HS1-0347-000	GEAR, 33T/24T
32	HS1-0348-000	GEAR, 18T
33	HS1-0349-000	GEAR, 25T
34	HS1-2312-000	SPRING
35	HS1-2313-000	SPRING, CS (2)
36	HS1-2314-000	SPRING
37	HS1-3071-000	PULLEY, 23T
38	HS1-3072-000	PULLEY, 14T
39	HS1-9025-000	SCREW (4)
40	WE8-0051-000	FERRITE CORE, ESD-R-19D
41	WT2-0406-000	CORD HOLDER
42	XF9-0305-000	COGGED BELT

FIGURE 111 OPERATION UNIT

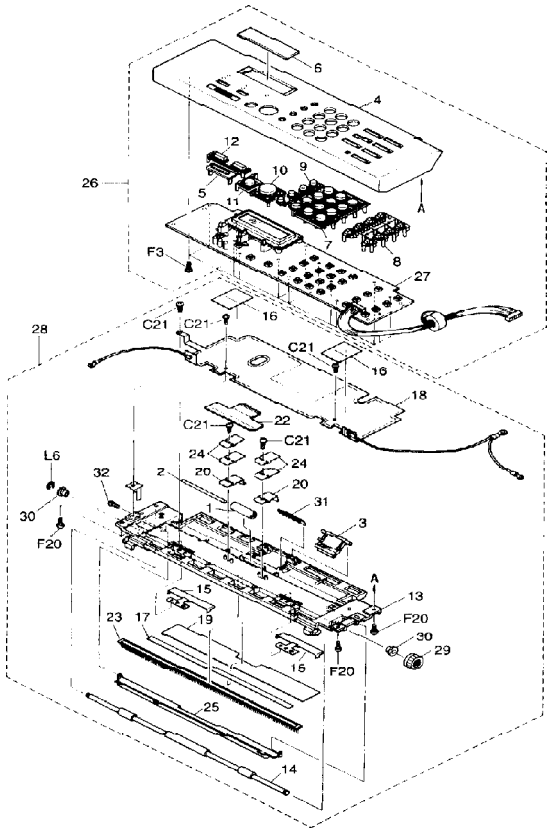

NUM.	PART #	DESCRIPTION
111-1	HA1-3064-000	ROLLER, BACK UP
2	HA1-3066-000	SHAFT, BACK UP ROLLER B
3	HF1-1114-000	SEPARATION GUIDE
4	HA2-2016-000	COVER, OPERATION PANEL
5	HA2-2017-000	COVER, LED
6	HA2-2018-000	COVER, LCD
7	HA2-2019-000	KEY TOP, NUMERIC
8	HA2-2020-000	KEY TOP, ONE-TOUCH
9	HA2-2021-000	KEY TOP, FUNCTION
10	HA2-2023-000	KEY TOP, START
11	HA2-2024-000	KEY TOP, STOP
12	HA2-2025-000	KEY TOP, CHANGE
13	HA2-2031-000	PLATE, DOCUMENT GUIDE (UPPER)
14	HA2-2032-000	ROLLER, EJECT
15	HA2-2033-000	LEAF SPRING (2)
16	HA2-2034-000	INSULATOR (2)
17	HA2-2035-000	SUPPORTER (2), W/REF SHEET
18	HA2-2036-000	SHIELD PLATE
19	HA2-2037-000	SHEET, WHITE REFERENCE
20	HA2-2041-000	LEAF SPRING (2)
21	HA2-2042-000	EARTH PLATE
22	HA2-2064-000	ELIMINATOR, STATIC CHARGE
23	HA2-2065-000	ELIMINATOR, STATIC CHARGE
24	HA2-2067-000	LEAF SPRING (4)
25	HF1-1113-000	SUPPORTER W/REF SHEET
26	HG1-3719-000	OPERATION PANEL UNIT
27	HG1-3720-000	OPCNT CARD UNIT
28	HG1-3721-000	DOCUMENT GUIDE UNIT (UPPER)
29	HS1-0341-000	GEAR, 20T
30	HS1-1064-000	BUSHING, 6MM (2)
31	HS1-2311-000	SPRING
32	HS1-9024-000	SCREW

FIGURE 120 PRINTER COVER UNIT

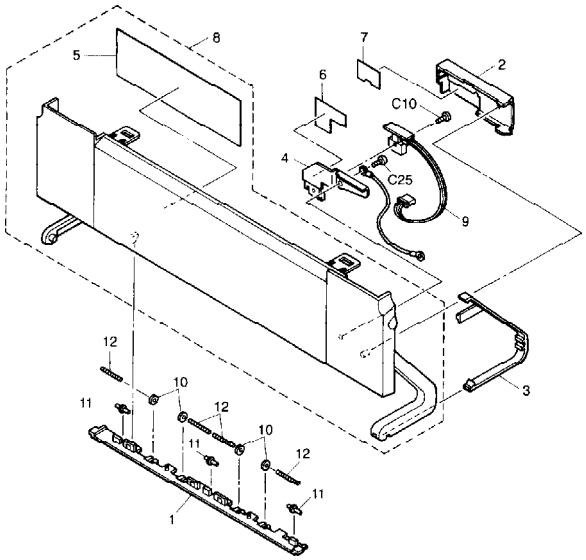

NUM.	PART #	DESCRIPTION
120-	HG1-3726-000	PRINTER COVER UNIT
1	HA2-2092-000	HOLDER, WHEEL
2	HA2-2093-000	COVER, FOOTER MARK SENSOR
3	HA2-2094-000	COVER, CABLE
4	HA2-2095-000	BRACKET, FOOTER MARK SENSOR
5	HA2-2101-000	LABEL, CARTRIDGE SET
6	HA2-2104-000	INSULATOR
7	HA2-2105-000	SHEET, FOOTER MARK SENSOR
8	HF1-1122-000	PRINTER COVER
9	HG1-3794-000	SENSOR, FOOTER MARK
10	QA2-0316-000	WHEEL, STAR (A) (4)
11	QA2-0317-000	WHEEL, STAR (B) (3)
12	QA2-0318-000	SHAFT, SPRING (4)

FIGURE 130 ASF FRAME

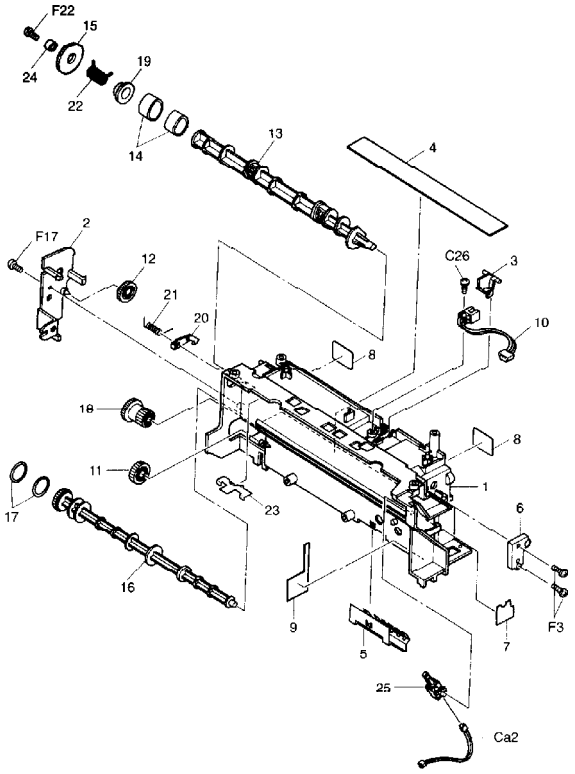

NUM.	PART #	DESCRIPTION
130-1	HA2-2107-000	CHASSIS, ASF
2	HA2-2108-000	BRACKET, GEAR
3	HA2-2109-000	ACTUATOR, RPS
4	HA2-2110-000	SHEET
5	HA2-2111-000	EARTH PLATE
6	HA2-2116-000	HOLDER, SHAFT
7	HA2-2119-000	SHEET
8	HA2-2120-000	PAPER GUIDE (2)
9	HA2-2175-000	INK ABSORBER
10	HH7-1936-000	SENSOR, RECORDING PAPER
11	QA2-0426-000	GEAR, TRANSFER
12	QA2-0451-000	GEAR, IDOL
13	QA2-0456-000	SHAFT, PICK-UP ROLLER
14	QA2-0457-000	RING, PICK-UP ROLLER (2)
15	QA2-0458-000	GEAR, PICK-UP
16	QA2-0461-000	ROLLER, FEED
17	QA2-0462-000	RING, RUBBER (2)
18	QA2-0573-000	GEAR, SLOW DOWN
19	QA2-0574-000	CAM, CONTROL
20	QA2-0576-000	ARM, POSITIONING
21	QA2-0577-000	SPRING
22	QA2-0915-000	SPRING, CLUTCH
23	QA2-0998-000	LEAF, POSITIONING
24	QA2-1013-000	COLLAR
25	WC4-5052-000	MICRO SWITCH

FIGURE 140 BASE CASE UNIT

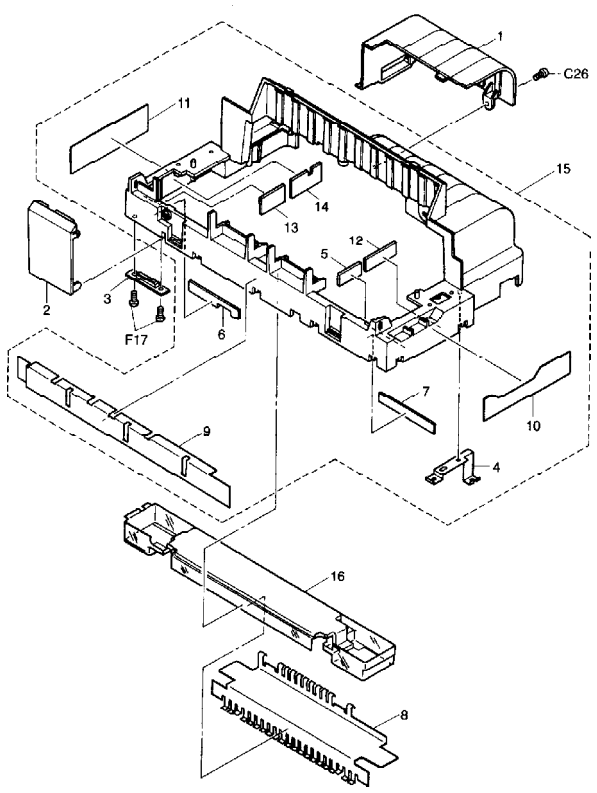

NUM.	PART #	DESCRIPTION
140-1	HA2-2004-000	COVER, NCU
2	HA2-2005-000	COVER, RELEASE LEVER
3	HA2-2006-000	STOPPER, COVER
4	HA2-2087-000	EARTH PLATE
5	HA2-2165-000	INK ABSORBER
6	HA2-2169-000	INK ABSORBER
7	HA2-2170-000	INK ABSORBER
8	HA2-2171-000	EARTH PLATE, PRINTER
9	HA2-2186-000	INK ABSORBER
10	HA2-2187-000	INK ABSORBER
11	HA2-2188-000	INK ABSORBER
12	HA2-2189-000	INK ABSORBER
13	HA2-2190-000	INK ABSORBER
14	HA2-2191-000	INK ABSORBER
15	HF1-1119-000	BASE CASE
16	HF9-0286-000	INK TRAY

FIGURE 150 PRINTER UNIT

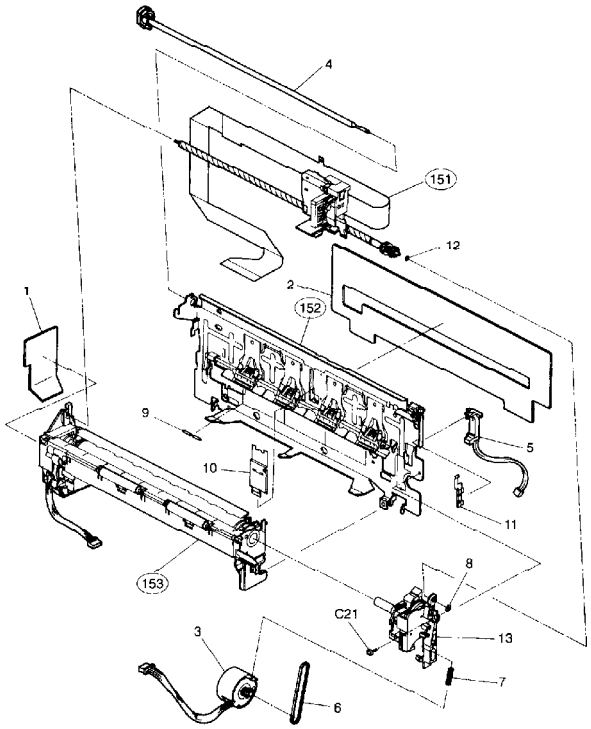

NUM.	PART #	DESCRIPTION
150-	HG1-3711-000	PRINTER UNIT
1	HA2-2176-000	INK ABSORBER
2	HA2-2177-000	INK ABSORBER
3	HF1-1111-000	MOTOR, CARRIAGE
4	HF1-1112-000	SHAFT, CARRIAGE GUIDE
5	HH7-1934-000	SENSOR, PAPER
6	QA2-0321-000	BELT, CARRIAGE DRIVE
7	QA2-0323-000	SPRING, BELT TENSION
8	QA2-0325-000	STOPPER, CARRIAGE SHAFT
9	QA2-0415-000	ROLLER, PRESSURE (4)
10	QA2-0544-000	HOLDER, CARRIAGE RIBBON
11	QA2-0571-000	PLATE, SHIELD
12	QA2-0657-000	SLIDER
13	QG1-5311-000	PURGE UNIT

FIGURE 151 CARRIAGE UNIT

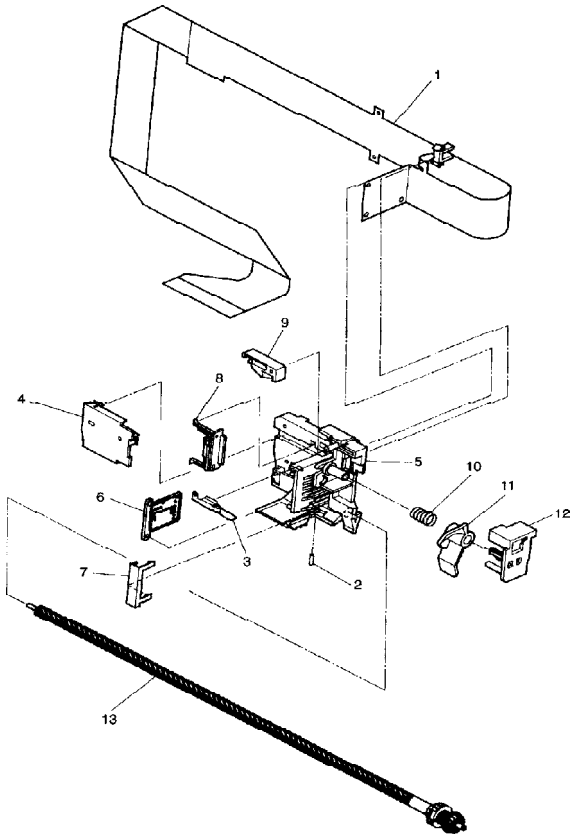

NUM.	PART #	DESCRIPTION
151-	HG1-3712-000	CARRIAGE UNIT
1	HG1-3734-000	UNIT, CARRIAGE RIBBON CABLE
2	QA2-0362-000	PIN, LEAD
3	QA2-0363-000	HOLDER, LEAD PIN
4	QA2-0364-000	COVER, CARRIAGE
5	QA2-0366-000	BASE, CARRIAGE
6	QA2-0367-000	PAD, CONTACT
7	QA2-0368-000	HOLDER, RIBBON CABLE (UPPER)
8	QA2-0369-000	HOLDER, RIBBON CABLE (LOWER)
9	QA2-0370-000	HOOK, BJ CARTRIDGE
10	QA2-0371-000	SPRING
11	QA2-0372-000	LEVER, HOOKING
12	QA2-0373-000	COVER, HOOK
13	QG1-5270-000	SCREW, LEAD

FIGURE 152 CHASSIS UNIT

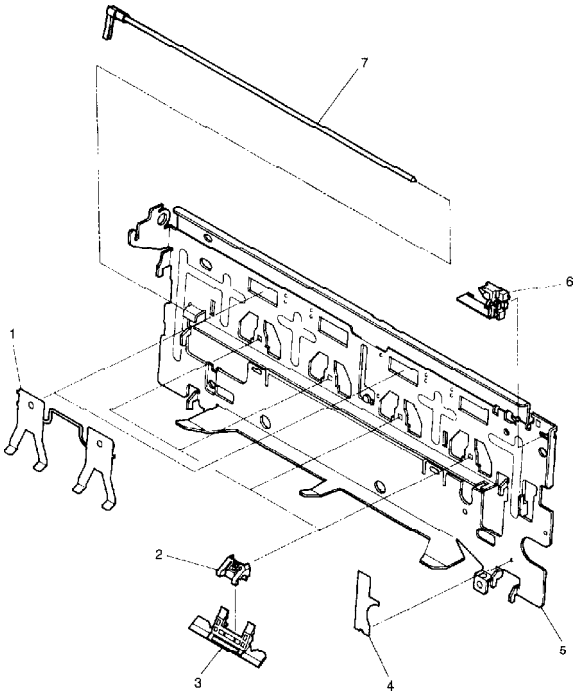

NUM.	PART #	DESCRIPTION
152-	QG1-5122-000	CHASSIS UNIT
1	QA2-0328-000	LEAF SPRING, PRESSURE PLATE (2)
2	QA2-0329-000	HOLDER, PRESSURE PLATE (4)
3	QA2-0330-000	PLATE, PRESSURE (4)
4	QA2-0333-000	ABSORBER, INK
5	QA2-0546-000	CHASSIS
6	QA2-0561-000	HOLDER, GUIDE SHAFT
7	QF1-5036-000	SHAFT, PRESSURE PLATE RELEASE

FIGURE 153 PAPER FEED BASE UNIT

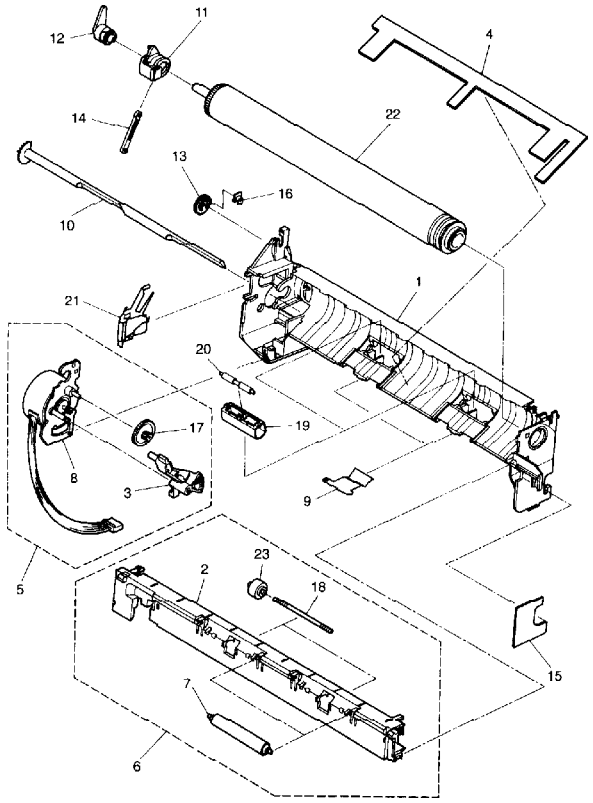

NUM.	PART #	DESCRIPTION
153-	HG1-3714-000	PAPER FEED BASE UNIT
1	HA2-2152-000	BASE, PAPER FEED
2	HA2-2153-000	PLATE, PLATEN
3	HA2-2154-000	LEVER, RELEASE
4	HA2-2174-000	INK ABSORBER
5	HG1-3715-000	MOTOR UNIT, PAPER FEED
6	HG1-3716-000	PLATEN PLATE UNIT
7	HG1-3717-000	ROLLER, EJECT (2)
8	HH7-1932-000	MOTOR, PAPER FEED
9	QA2-0381-000	LEAF SPRING, PINCH ROLLER (2)
10	QA2-0383-000	SHAFT, PINCH ROLLER RELEASE
11	QA2-0384-000	CRANK, RELEASE
12	QA2-0385-000	HOLDER, FEED ROLLER
13	QA2-0386-000	DIAL, ADJUST
14	QA2-0388-000	LOD, RELEASE
15	QA2-0391-000	ABSORBER, INK
16	QA2-0392-000	HOLDER, LEAD SCREW
17	QA2-0399-000	GEAR, SLOWDOWN
18	QA2-0405-000	SHAFT, ROLLER (2)
19	QA2-0505-000	HOLDER, PINCH ROLLER (2)
20	QA2-0506-000	ROLLER, PINCH (2)
21	QA2-0659-000	STABILIZER, FEED ROLLER
22	QF1-5038-000	ROLLER, FEED
23	QG1-5127-000	ROLLER, TRANSMISSION (2)

FIGURE 160 PAPER HOLDER UNIT

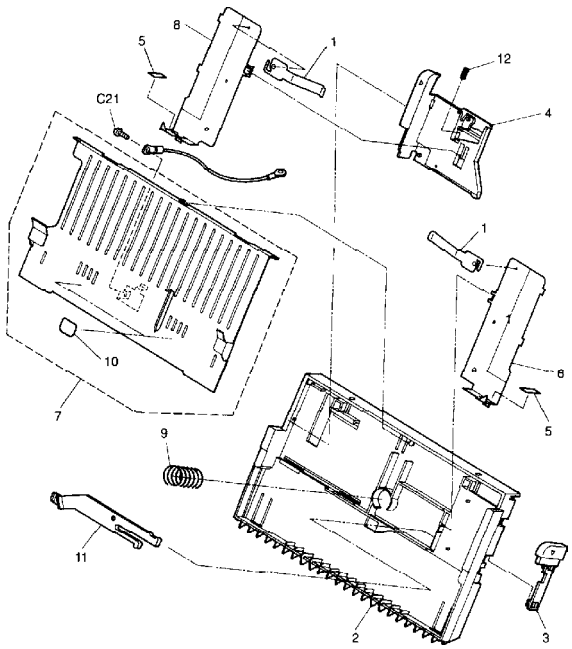

NUM.	PART #	DESCRIPTION
160-	HG1-3730-000	PAPER HOLDER UNIT
1	HA2-2049-000	EARTH PLATE, PRESSURE PLATE (2)
2	HA2-2112-000	HOLDER, RECORDING PAPER
3	HA2-2113-000	LATCH, PAPER RELEASE
4	HA2-2114-000	GUIDE, RECORDING PAPER
5	HA2-2150-000	SHEET (2)
6	HA2-2158-000	PLATE, PAPER HOLDER (R)
7	HF1-1121-000	PRESSURE PLATE
8	HF1-1128-000	PLATE, PAPER HOLDER (L)
9	QA2-0430-000	SPRING
10	QA2-0446-000	SHEET, SEPARATION (2)
11	QA2-0581-000	LEVER, BLANK PAPER RELEASE
12	QA2-0585-000	SPRING, COIL

NUM.	PART #	DESCRIPTION